EXTRA FILLER PANEL PIECE USE AND INSTALLATION

When your firebox is raised from the floor you will require an EXTRA Filler Panel piece To fill the gap between your floor and the bottom of the firebox.

NOTE: The Extra filler panel piece is meant to be used at the bottom of your firebox.

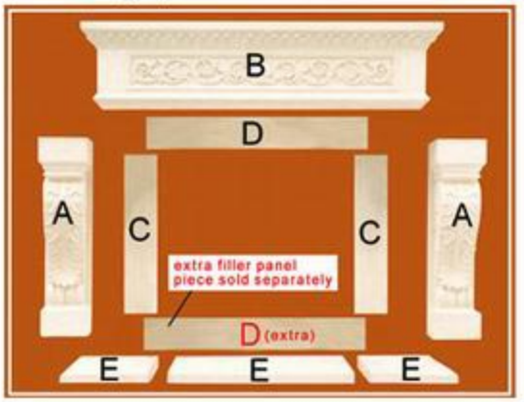

Installation and cleaning Instructions

Historic Mantels Parts

A 2-LEGS
B 1-MANTEL SHELF
C 2-SIDE FILLER PANELS
D 1-TOP FILLER PANEL
E 3-PIECE HEARTH (Included with Chateau and President Series mantels ONLY)
D 1-EXTRA BUTTOM FILLER PANEL AVALABLE IN ONE SIZE 16 X 44. IT MUST BE CUT TO THE REQUIRED SIZE.

Step 1- Hearth Installation (Chateau & President Series mantels Only)
Center the hearth at the firebox opening and set tight to the wall. The hearth should be level to ensure there are no Spaces between the floor and under side of the Hearth. Once centered apply construction adhesive (we recommend PL Premium) to the under side of the hearth.

PL Premium

Step 2 - Filler panel installation

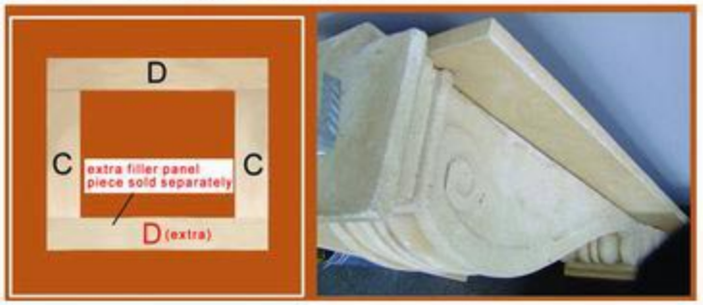

Angle Grinder

Cut the filler panels to the required size and the EXTRA BOTTOM FILLER PANEL if you ordered it separately. We recommend using a small angle grinder with concrete blade. Apply construction adhesive to the back of the filler panels. Place the mantel legs to determine the correct measurements.Do not screw the legs into the wall until the filler panels have been installed.

Step 3 – Leg Installation

Determine and mark the position of the legs. Mark sure the legs are level and identical distance on either side of the firebox opening. Use shims to level the mantel legs if required. Apply construction adhesive to the back of the legs and screw the legs to the wall using the metal wall tiesattached to the top of the legs.

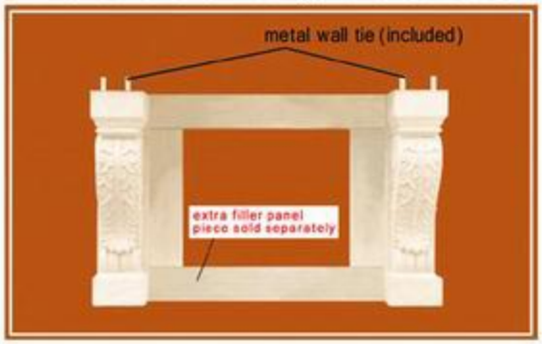

Step 4 - Install the mantel shelf

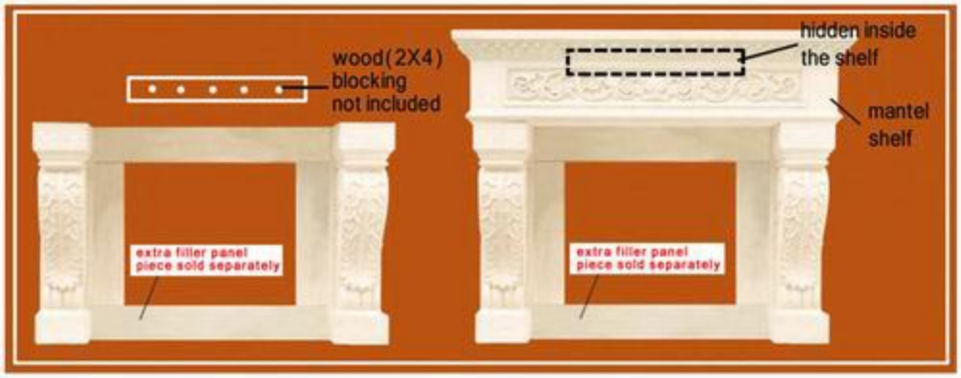
wood(2X4) blocking not included
hidden inside the shelf
mantel shelf
extra filler panel piece sold separately
extra filler panel piece sold separately

Mantel shelves are cast with a cavity in the back to accommodate wood blocking for support. Locate the wood blocking position by off setting the material thickness at the top of the shelf from a pencil line indicating the top edge of the mantel shelf when set on the mantel legs. Screw wood blocking with wood screws Into the wall studs for greatest support. Apply adhesive to the back surfaces of the mantel shelf, top of leg and the top of the wood blocking to ensure continuous contact with the wall. Use bracing to secure the mantel shelf tight to the wall until the adhesive sets

Step 5 -Finishing
Fill any gaps around the mantel with the cement provided. NOTE the cement provided dries in less then 20 minutes. Add water and apply promptly.
*mix only a small amount of cement as needed as it dries in 20 min
Historic Mantels are factory treated with a clear water-based sealer and do not require additional surface treatment
Step 6 -Cleaning
Clean mantel with a damp cloth as needed. Do Not wet the mantel. Water marks may appear if the cloth is wet.

HISTORIC MANTELS all rights reserved